




# Instructions

## EXTENSION AND SIDE WIDENING ANGLE KIT ENSEMBLE D'EXTENSION ET AILES ÉLARGISSANTES #700461 (54") or / ou #700472 (48")

Install the kit according to the following instructions:  
Installer l'ensemble selon les instructions suivantes:

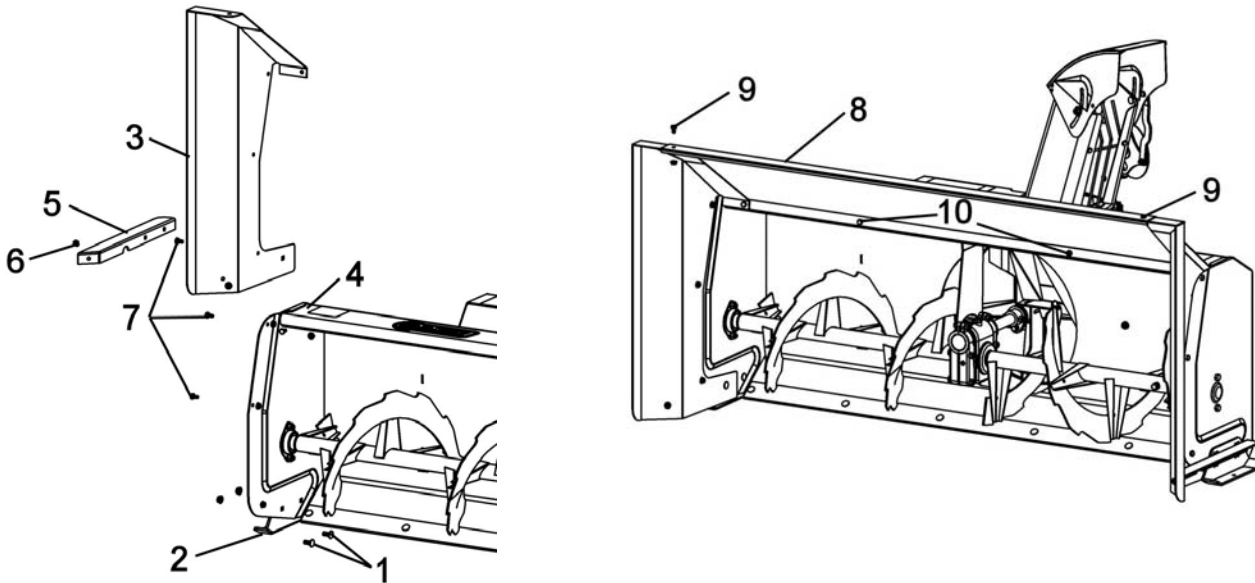

- Remove the carriage bolts (item 1) and flange nuts from the skid shoe (item 2).
- Place the right widening angle (item 3) inside the right side of snowblower frame (item 4) as shown.
- Reinstall the skid shoe, then the right reinforcement (item 5) the carriage bolts and flange nuts as shown.
- Secure in place the reinforcement on the right widening angle with the 1/4" x 1/2" hex bolt (item 6).
- Use the widening angle as a template and drill the 9/32" holes in the frame of the snowblower (if they are not already drilled). Secure in place with the 1/4" x 1/2" hex bolts (item 7) and flange nuts. Repeat the same steps for the other side.
- Install the extension (item 8) on the top of the snowblower and on the widening angles. Secure at the top of each corner with a 1/4" x 1/2" hex bolts (item 9) and flange nuts.
- Use the extension as a template, drill two holes 9/32" holes and secure with two 1/4" x 1/2" hex bolts (item 10) and flange nuts. Tighten all the bolts firmly.

- Enlever les boulons de carrosserie (item 1) et écrous à bride du patin (item 2).
- Placer l'aile élargissante droite (item 3) à l'intérieur du châssis de la souffleuse (item 4) tel qu'illustré.
- Réinstaller le patin, ensuite le renfort (item 5), les boulons de carrosserie et les écrous à bride tel qu'illustré.
- Sécuriser en place le renfort sur l'aile élargissante avec le boulon hex 1/4" x 1/2" (item 6).
- Utiliser l'aile élargissante droite comme gabarit et percer les trous de 9/32" dans le châssis de la souffleuse (si ils ne sont pas déjà percés). Sécuriser en place avec les boulons hex 1/4" x 1/2" (item 7) et écrous à bride. Répéter les étapes sur l'autre côté.
- Installer l'extension (item 8) sur le dessus de la souffleuse et sur les ailes élargissantes. Sécuriser le dessus de chaque coin avec un boulon hex 1/4" x 1/2" (item 9) et écrous à bride.
- Utiliser l'extension comme gabarit, percer deux trous de 9/32" et sécuriser avec deux boulons hex 1/4" x 1/2" (item 10) et écrous à bride. Serrer tous les boulons fermement.