


EXTENSION FOR UNIVERSAL SUBFRAME #700475 INSTALLATION

Install the kit according to the following instructions:

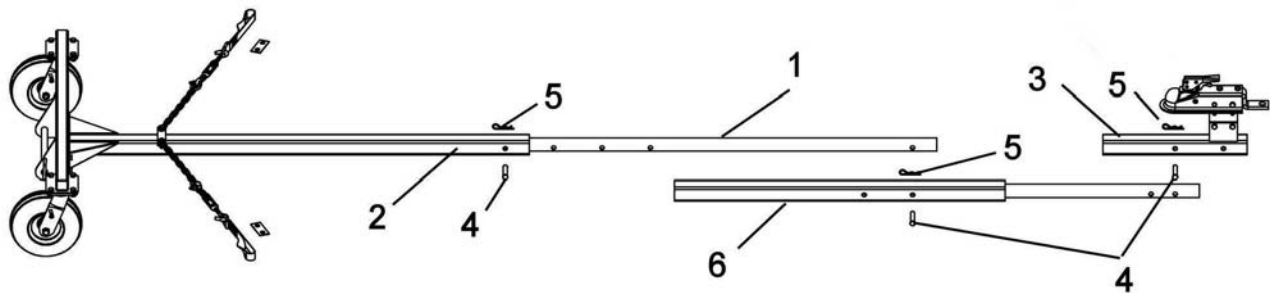

This extension for universal subframe allows the installation of an accessory on a vehicle that is longer than most. The option inserted in the original subframe will add 33 in. to the length of the subframe.
To choose the right adjustment :

- Insert the adjustment tube (item 1) into the subframe (item 2) by positioning the isolated hole towards the back as shown.

IMPORTANT:


To prevent premature damage to the subframe, make sure the extension is pushed into the subframe to its maximum.

- Insert the extension (item 6) into the adjustment tube and insert the attaching support (item 3) on the extension.
- Do not secure.
- Pivot the attaching support to the side to facilitate installation.
- Drive the vehicle forward over the subframe, make sure the pivoting wheels do not come into contact with the front wheels of the vehicle.
- Identify the right length and secure in place with the three pins (item 4) and the hair pins (item 5).



EXTENSION POUR SOUS-CHÂSSIS UNIVERSEL #700475 INSTALLATION

Installer l'ensemble selon les instructions suivantes:

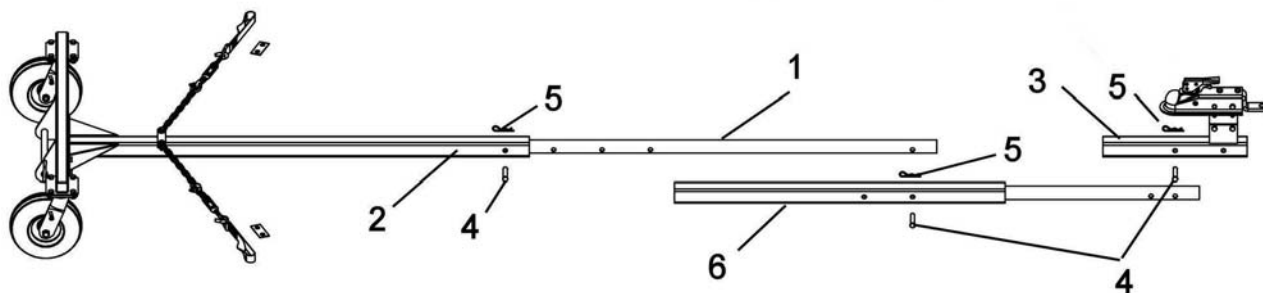

Cette extension pour sous-châssis universel permet d'installer l'accessoire sur des véhicules plus long. L'option intégrée au sous-châssis original d'ajouter 33 po. au sous-châssis.

Pour choisir le bon ajustement :

- Insérer le tube d'ajustement (item 1) dans le sous-châssis (item 2) en positionnant le trou isolé vers l'arrière tel qu'illustré.

Important:

Pour limiter les risques d'endommager prématurément le sous-châssis, s'assurer que l'extension soit emboîtée au maximum dans le sous-châssis

- Insérer l'extension (item 6) sur le tube d'ajustement et insérer le support d'attache (item 3) sur l'extension.
- Ne pas fixer.
- Pivoter le support d'attache sur le côté pour faciliter l'installation.
- Avancer le véhicule au dessus du sous-châssis, assurez-vous que les roues pivotantes ne viennent pas en contact avec les roues avant du véhicule.
- Identifier la bonne longueur et sécuriser en place avec les trois goupilles (item 4) et les goupilles à ressort 3mm (item 5).